



3 Shelf Mini Side Trolley

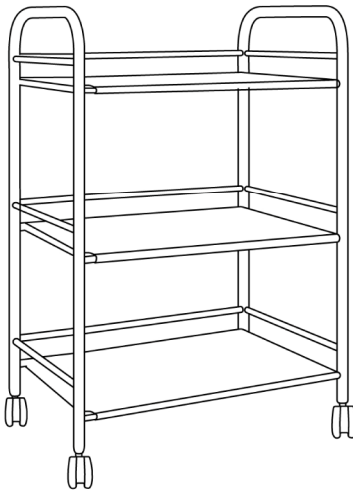

Parts

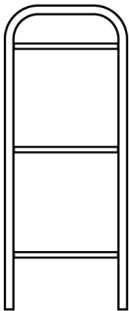

SHELF SIDES x2



LINK ROD x9



TRAY x3



WHEELS x4



SCREWS x18




FEET x4




ALLEN KEY x1

1

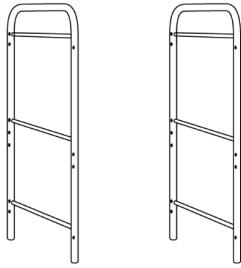


Line up the shelf sides so the holes are facing the right way around. **NOTE** : middle layers have extra optional holes so you can adjust shelf height to suit.

2

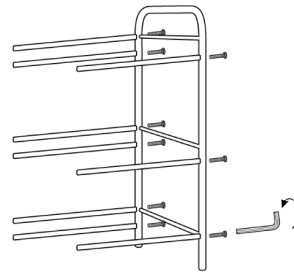


Attach the link rods loosely to one side first using screws, do not tighten fully.

3

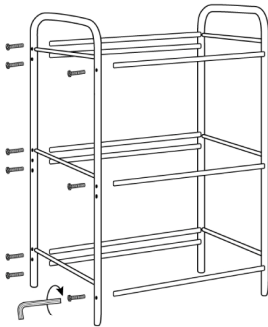


Attach other shelf side to frame using screws, again do not tighten fully yet.

4

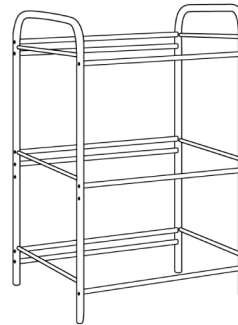


Adjust the frame so it is level and balanced, then tighten all the screws.

5

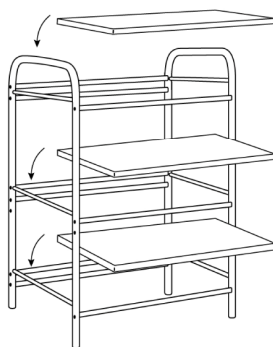

Add the trays. Edges should face down. Press down firmly to fix into place.

6

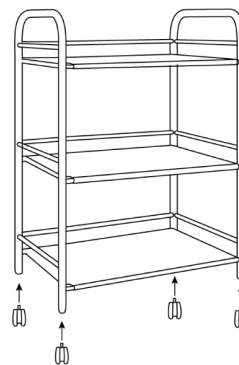

Depending on your preference, add adjustable feet or the wheels.